

SPINNING IMPINGER

Instructions for Programming the Remote to the Impinger



Scan QR Code to access additional materials & videos on this product

PART A - Getting Started

1. Start with the impinger facing the same direction as **Figure A**.
2. The LED power button on the impinger should be OFF (depressed).
3. Insert four (4) new AA batteries. A steady green light will glow (upper right side).
4. Locate a pin to utilize in Part B. See **Figure B** for pin options.

How will you know if the remote has not been programmed previously?

When you press the A or B button on the remote, the green light on the impinger will flicker, and you will see a red light below the flickering green light.



Figure A

PART B - Preparing the Impinger

5. Insert the pin into the internal programming port (small hole at top left - see **Figure A**) and hold until the light blinks green 3 times. Here's what you should see:
 - o First, the light will blink from green to red.
 - o Next, the light will go green again.
 - o Last, after a few seconds, the light will flash green three times.
 - o Now, you can remove the pin.

The impinger is programmed to the correct mode but not paired with the remote yet.



Figure B

Items that can be used for a pin

PART C - Programming the Remote to the Impinger

6. Re-insert the pin the internal programming port to make the light go red.
7. Remove the pin, then press and hold remote button "A" until the light flickers green and the impinger automatically turns on.
8. You can now turn the impinger off with remote button "B."

The impinger is now successfully paired with the remote.



Remote

 **ALWAYS REMOVE BATTERIES when not in use** 

After Pairing is Complete: Don't Mix Power Sources

A mix of pushing the LED power button on the impinger AND the remote is not supported. You should only utilize the remote -OR- the LED power button on the impinger for turning the unit both ON and OFF.

Example: Manually pushing the LED power button on the impinger to turn the unit ON will not allow you to turn the impinger OFF with the remote and vice versa.

Do you want to...

program multiple impingers to one remote?

Follow the steps above using the same remote for each impinger.

unpair a remote to an impinger?

Pair that impinger with a different remote by following the steps above.